



Action Replay 4M Plus Dual Boot Mod By RazorX

Action Replay 4M Plus

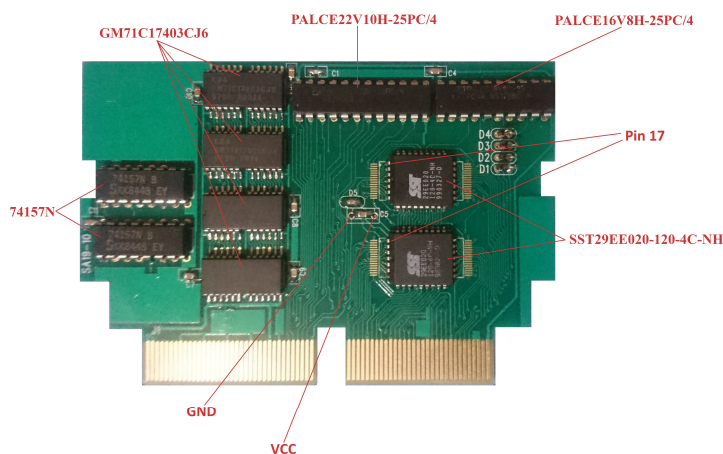

Mod

Lift Pin 17 on Both SST29EE020 Chips (Currently Both Are Tied To GND) And Add A Wire Connecting Them Together And A Wire Coming From One End To The Center Pin of A Switch. Solder A Wire From One Side of The Switch To VCC And The Other Side of The Switch To GND.

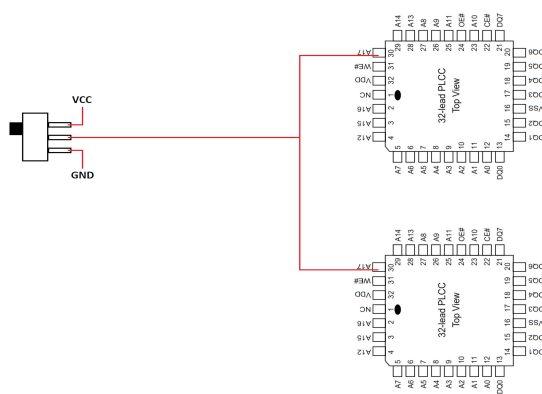

Set The Switch To The GND Position And Plug The Action Replay Cartridge Into The Saturn (The Chips Face The Front of The Saturn) And Power on The Saturn And It Should Boot Into The Action Replay.

Now Boot Up The Pseudo Saturn Kai Disc (Which Ever Method You Prefer) And Press The R Trigger To Enter Flasher Mode Then Set The Switch To The Opposite Position (VCC) Then Flash Pseudo Saturn Kai Lite To Your Action Replay 4M Plus And Power off The Console And Set The Switch Back To The Original Position And Test It Out And It Should Boot Into The Default Action Replay Now Try Powering off Your Console And Switching The Switch And Powering It on Again And You Should Be Greeted With Pseudo Saturn Kai And That Is You Done Congratulations.

If The Console Boots Into Pseudo Saturn Kai Lite But Not Action Replay Then Just Use Pseudo Saturn Kai Lite To Boot Up The Disc Again And Change The Switch Back To What Should Be Action Replay And Press R Trigger To Enter Flasher Mode And Flash Action Replay 2.02 With Codes To It And You're Done.

End Result

